

## OSM Setup Instructions:


WARNING: The OSM is NOT Weatherproof, it is designed to be installed inside your gate opener control box.

[support@gatekeeperltd.com](mailto:support@gatekeeperltd.com) for help


1. Connect the USB extension cable to the OSM



Connect power adapter to the extension cable. Attach the positive and negative leads of the OSM power cable to the YG-200 12V connector. Red TO 12V AND Black to GND.

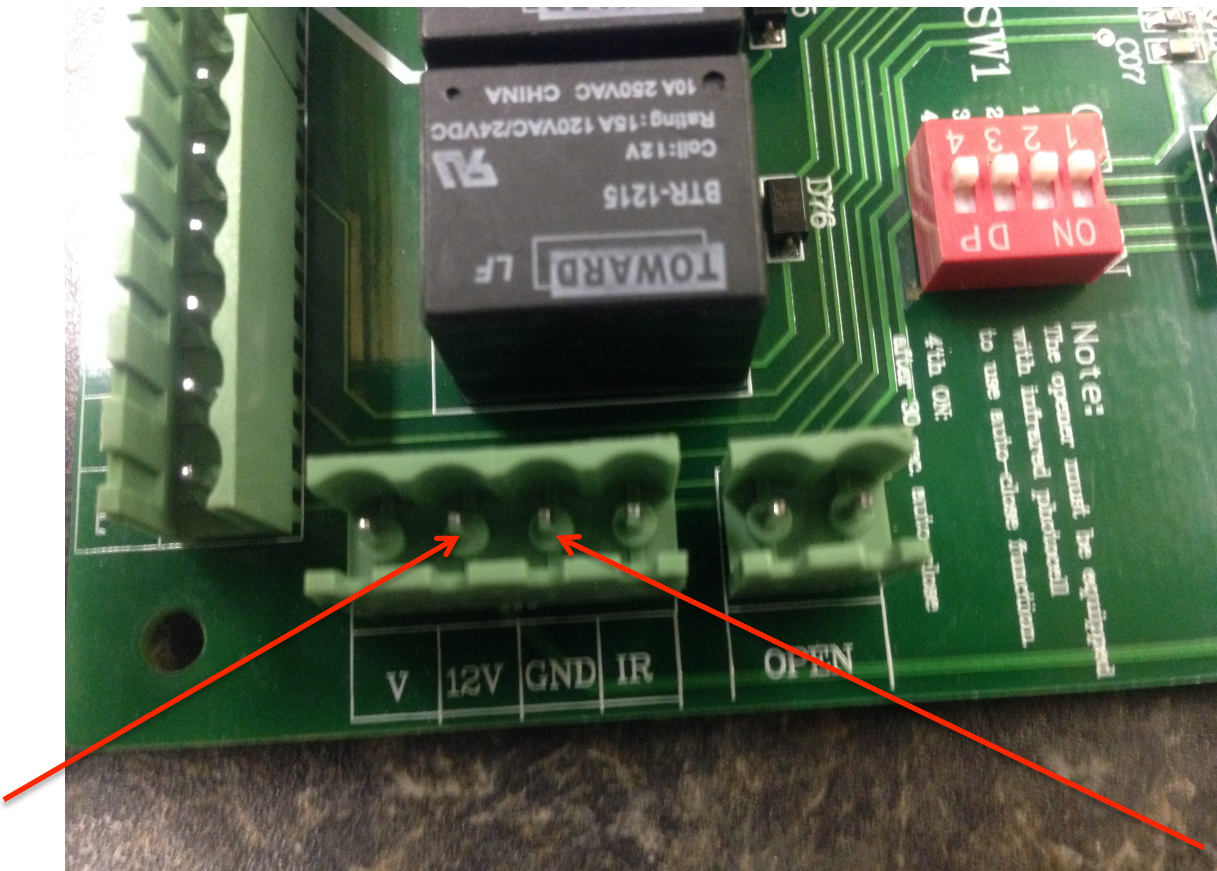


2. Attach v  
goes to  
If your C

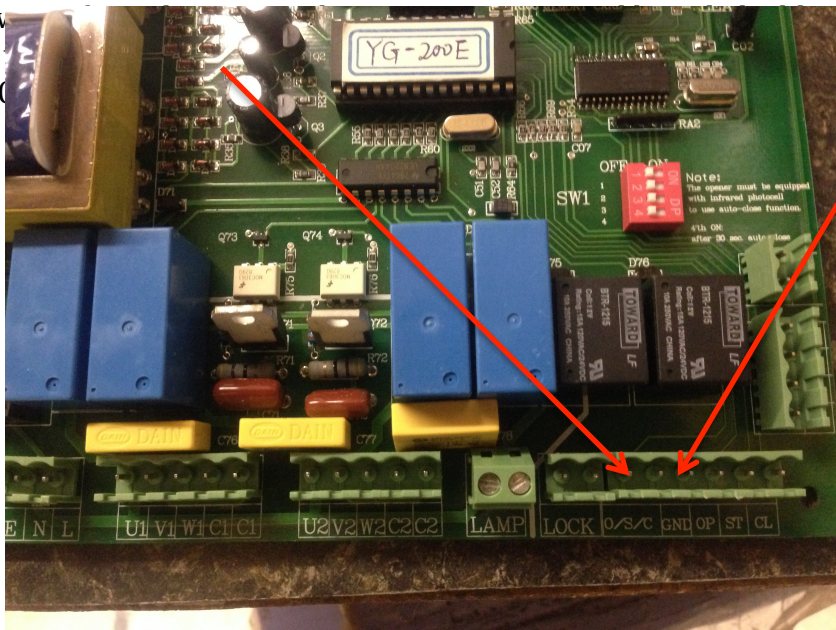


wire  
round.

3. Either connect using wifi to the “gatekeeper” SSID or via a wired Ethernet connection.

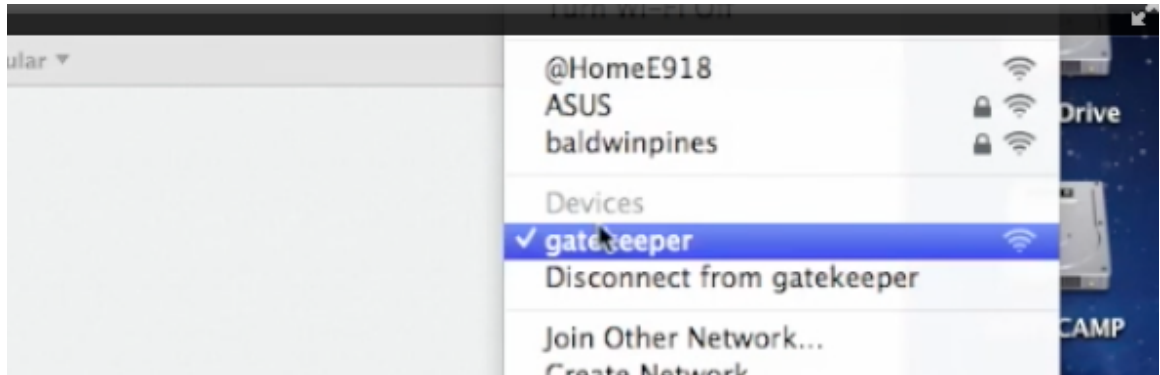

4. Your computer should be assigned an IP address like 192.168.0.X , open your browser and connect to 192.168.0.1
5. Enter your userID and Password and your Wifi parameters if you are using Wifi Click Submit. If you are not using wireless you may leave the parameters unchanged. Leave the poll time unchanged at 5 seconds.

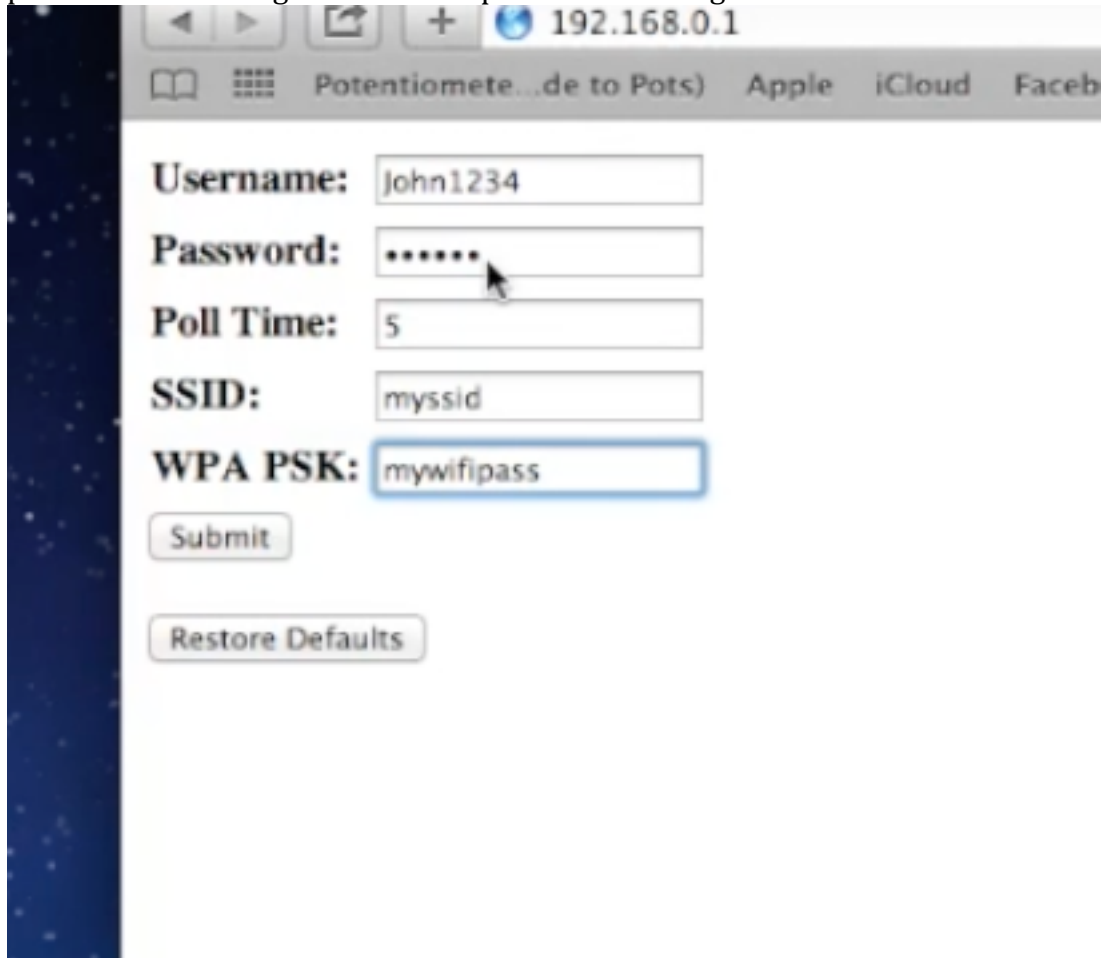

6. Reboot the device by disconnecting and reconnecting the power adapter.

7. Load the App on your phone:  
Android : <https://play.google.com/store/apps/details?id=tm.app.gatekeeper>  
iPhone : [https://itunes.apple.com/us/app/osm-1/id717918191?mt=8&ign-mpt=uo%3D4%2522%2520target%253D%2522itunes\\_store%2522%253EOSM-1%2520-%2520Gatekeeper%2520Ltd](https://itunes.apple.com/us/app/osm-1/id717918191?mt=8&ign-mpt=uo%3D4%2522%2520target%253D%2522itunes_store%2522%253EOSM-1%2520-%2520Gatekeeper%2520Ltd)  
or visit <http://www.gatekeeperltd.com/osm/client/> to activate your gate via the web (You will be directed to another site which is secure SSL).
8. Enter your account information into the app or website and activate your gate from there.



If you require assistance please email [support@gatekeeperltd.com](mailto:support@gatekeeperltd.com) , call your distributor or check the documentation on our website [www.gatekeeperltd.com](http://www.gatekeeperltd.com)